


Ka4 & Ka4R Adjuster assembly.



Assembling your manual adjusters.

1. Screw on the lock nut to the adjuster barrel (Fig.1)
2. Place the brake pads in the caliper
3. Insert the Pad Pins and Spring
4. Insert the Adjuster Barrel into the side of the caliper ensuring the barrel protrudes past the pistons (Fig.2)
5. Insert the spring, then the small flanged barrel (with flange)
6. Insert black screw (Fig.1)
7. Fix the black screw to the brake pad using a 4mm Hex tool (Fig.3)
8. Fig.4 illustrates where the black screw mates with the brake pad

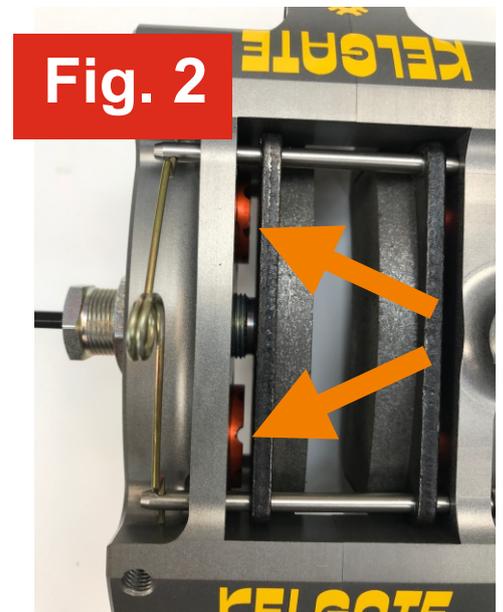